

USB Flash Drive Quick Start Guide

Driver Installation

No driver is required for Windows® ME/2000/XP or Mac® OS 9.0 and later. Driver installation is only needed for Windows® 98/98SE.

1. Driver (for Windows® 98/SE)

Please refer to our web site (<http://fmi.compusera.com/driver.asp?SKU=315710>) for driver. Follow the onscreen instructions.

2. Safely Removing the USB Flash Drive

A. Windows® 98 and 98SE:

Simply unplug the Flash Disk from the USB port after all files in the Flash Disk are closed.

B. Windows® ME, 2000 and XP

1. Click the green arrow  in the right bottom of task bar on the Windows.
2. The "Safely Remove Hardware" dialog box will appear.
3. Highlight "USB Mass Storage Device" and click "Stop".
4. The "Stop a Hardware Device" dialog box will appear.
5. Highlight "Easy Disk USB Device" and click "OK".
6. You will receive a confirmation pop-up stating "Safe to Remove hardware"
7. Remove the Flash Drive from USB port.

C. Macintosh OS 9 or above:

Highlight the Easy Disk icon on your desktop. Press Command (Apple key) plus the "E" key. The Flash Drive icon will disappear.
Remove the Flash Drive from the USB port.

All brand names and trademarks are the property of their respective owners.

Drivers for Windows 98 can be downloaded from the following site:

<http://fmi.compusera.com/driver.asp?SKU=315710>